


E-mail: sales@surmountor.com


## Aluminum slat for LED strip-A1201

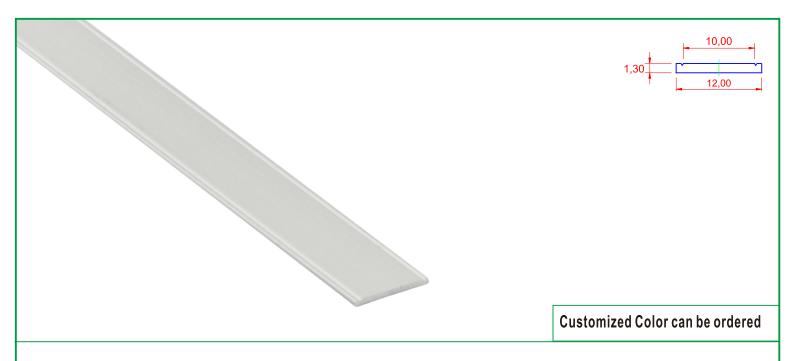

## Service Environment and Installation:

Stick the led strip with 3M tape to the flat bar. Put the aluminum flat bar to the led profile directly.

## 1, For IP001



## 2, For IP004+A2519

