


# Wooden Panel LED Aluminum Profile-A2508

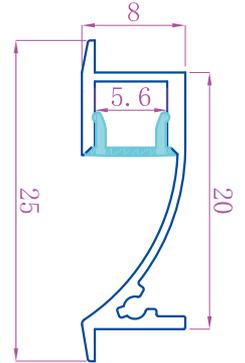

Customized Color can be ordered



LED Aluminum profile 1~3meter




PC Cover




Endcaps \*2  
1 with hole; 1 without hole.


## Service Environment and Installation:

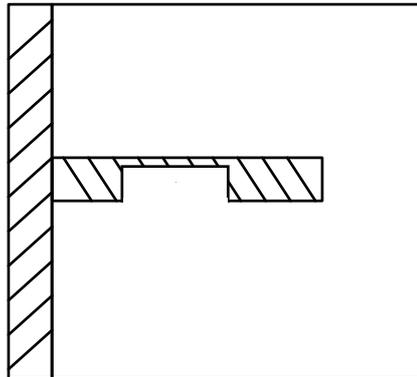


Reserve space on wooden panel for installing LED profile.

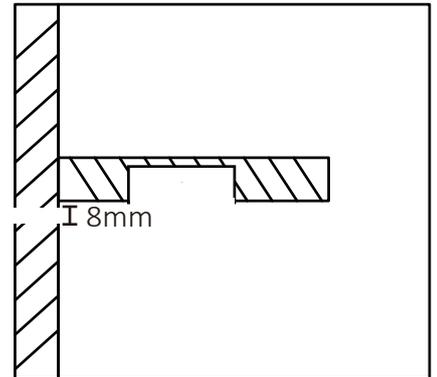

Drill a  $\phi 8\text{mm}$ (recommendatory) hole in the backside of the furniture, to allow power supply cable to go through.

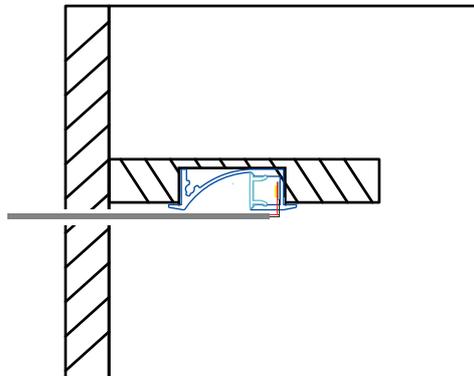

Install LED light on the wooden panel. Connect power supply with the wooden panel LED profile.

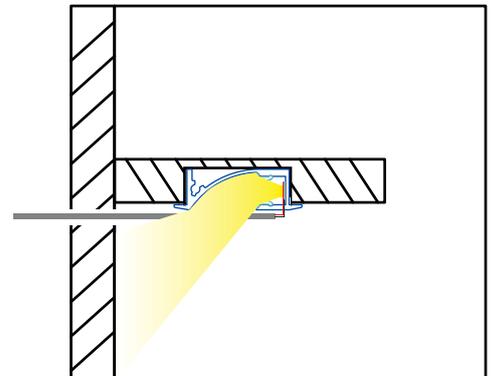

Turn on the power and light is ON.

## Scenes to be used

