


Recessed LED Aluminum Profile-W011(Plaster Construction)

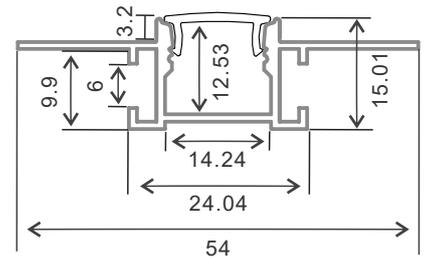


Customized Color can be ordered



Service Environment and Installation:

Down Lighting

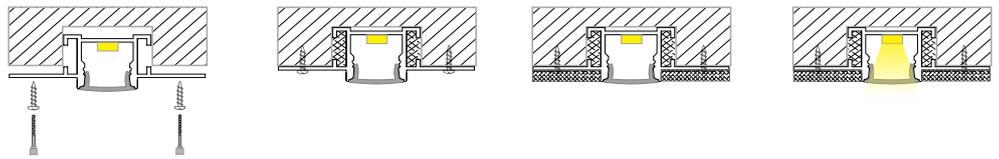

Wall Side Lighting



1, Install W011 profile into brick with screws.

2, Lay the mud sand on the W011 wings.

3, Apply lime on the mud sand, keeping it the same level with LED profile PC cover.

4, Turn on the light.



Frosted PC Cover



Plastic Endcaps *2
1 with hole; 1 without hole.

